WS6 Series Adjustable End Strippers


Warning! <u>This tool should not be used on live electrical circuits.</u> <u>It is not protected against electrical shock!</u> Always use **OSHA/ANSI/CE** or other industry approved eye protection when using tools. This tool is not to be used for purposes other than intended. Read carefully and understand instructions before using this tool.

Note: These tools can be manually or power operated for stripping polyethylene, (XLPE) cross link polyethylene, and (EPR) ethylene propylene rubber insulation on 15KV to 46KV cables with .900"(22.86mm) to 2.030"(52.07mm) in diameter.




OPERATING INSTRUCTIONS


For best results, the end of the cable to be stripped should be cut straight and square using a hacksaw or curved jaw cable cutters.

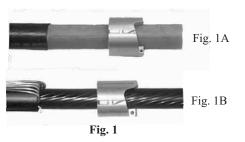


Step 1. (Fig 1) Check the bushing by sliding it over polyethylene insulation (Fig 1A) or semi-con over EPR insulation (Fig. 1B). The bushing should fit closely but still rotate easily on the cable. *We recommend the use of lubricant applied to the semi-con surface on EPR cable.*

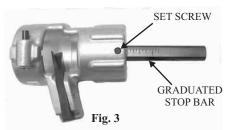


Step 3. (Fig. 3) To adjust the stop bar for desired length of conductor exposure, loosen the set screw located on the end of the tool body directly above the stop bar. Adjust the stop bar to the desired length of insulation to be stripped and tighten the set screw.

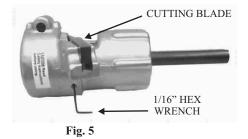


Step 5. (Fig. 5) Before stripping the insulation, adjust the blade edge to 1/64"(.39mm)-1/32"(.79mm) above the conductor surface by inserting the provided hex wrench through the hole located beneath the tool blade.

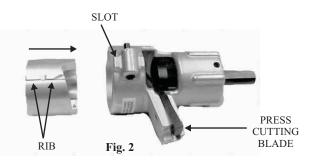


Step 2. (Fig. 2) To insert the bushing into the WS6, line up rib on the bushing with the slot on the WS6 housing. Raise the cutting blade by depressing outer end and insert the bushing until it locks into place.

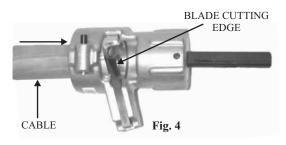

Step 4. (Fig. 4) To strip the insulation, insert the cable into the WS6 until it comes in contact with cutting edge of the blade. Always check the blade position with respect to the conductor, before stripping the insulation.

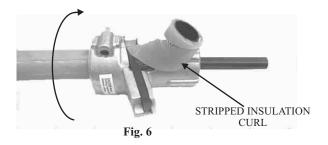

Step 6. (Fig. 6) Rotate the tool clockwise around the cable to remove the insulation. Insulation will peel off until the cable conductor reaches the stop bar. The blade will automatically sever the insulation cleanly at the end of the cut.

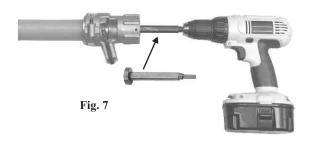

(Fig. 8) WS6 drill adaptable models are driven from the end of the data adaptable stop bar.

Operating notes:

- Set the tool up in the manual mode as described in steps 5 and 6. Make a manual test cut to verify blade depth.
- Hold the tool straight and parallel to the cable
- Avoid freewheeling the tool. When insulation stripping is complete, immediately stop the tool. Remove the tool from the cable while the drill is OFF.
- Impact wrenches are not recommended



(Fig. 8) To remove the bushing, depress the lock release pin on the housing and slide the bushing out.



Fig. 9 - Blade Locking Screw

Note: This screw is recommended for use when stripping Ethylene Propylene Rubber (EPR) insulation on primary underground cable. Set the cutting blade depth as noted in step 5 above. Thread the locking screw into the tool body as shown here, until it touches the back side of blade and prevents blade movement. The locked blade will ensure a clean and square insulation cut on the EPR cable.

REPLACEMENT PARTS AND FEATURES

**For best stripping results, size up PE and XLPE insulated cables over the insulation diameter. Size up EPR cables over the semi-con diameter.

O.D. over insulation/semi-con**

(mm)

36.47 - 37.08

37.11 - 37.72

37.74 - 38.35

38.38 - 38.99

39.01 - 39.62

39.65 - 40.26

40.28 - 40.89

40.92 - 41.53

41.55 - 42.16

42.19 - 42.80

42.82 - 43.43

43.46 - 44.07

44.09 - 44.70

44.73 - 45.34

45.36 - 45.97

46.00 - 46.61

46 63 - 47 24

47.27 - 47.88

(inch)

1.436 - 1.460

1.461 - 1.485

1.486 - 1.510

1.511 - 1.535

1.536 - 1.560

1.561 - 1.585

1.586 - 1.610

1.611 - 1.635

1.636 - 1.660

1.661 - 1.685

1.686 - 1.710

1.711 - 1.735

1.736 - 1.760

1.761 - 1.785

1.786 - 1.810

1.811 - 1.835

1836 - 1860

1.861 - 1.885

Tool Part	Blade	Blade Part	Rotating Stop
No.		No.	Bar Part No.
12900	CB8-2	12903	12928
12917	CB8-2	12903	12928
12918	CB8-2	12903	12954
12950	CB8-2	12903	12953
12951	CB8-2	12903	12953
12952	CB8-2	12903	12954
	No. 12900 12917 12918 12950 12951	No. CB8-2 12900 CB8-2 12917 CB8-2 12918 CB8-2 12950 CB8-2 12951 CB8-2	No. No. 12900 CB8-2 12903 12917 CB8-2 12903 12918 CB8-2 12903 12950 CB8-2 12903 12951 CB8-2 12903

Bushing #

WS 6-1.000

WS 6-1.025

WS 6-1.050

WS 6-1.075

WS 6-1.100

WS 6-1.125

WS 6-1.150

WS 6-1.175

WS 6-1.200

WS 6-1.225

WS 6-1.250

WS 6-1.275

WS 6-1.300

WS 6-1 325

WS 6-1.350

WS 6-1.375

WS 6-1.400

WS 6-1.425

WS 6-1 450

O.D. over insulation/semi-con**

(mm)

24.41 - 25.02

25.04 - 25.65

25.68 - 26.29

26.31 - 26.92

26.95 - 27.56

27.58 - 28.19

28.22 - 28.83

28.85 - 29.46

29.49 - 30.10

30.12 - 30.73

30.76 - 31.37

31.39 - 32.00

32.03 - 32.64

32.66 - 33.27

33.30 - 33.91

33.93 - 35.54

34.57 - 35.18

35.20 - 35.81

35.84 - 36.45

(inch)

0.961 - 0.985

0.986 - 1.010

1.011 - 1.035

1.036 - 1.060

1.061 - 1.085

1.086 - 1.110

1.111 - 1.135

1.136 - 1.160

1.161 - 1.185

1.186 - 1.210

1.211 - 1.235

1.236 - 1.260

1.261 - 1.285

1 286 - 1 310

1.311 - 1.335

1.336 - 1.360

1.361 - 1.385

1.386 - 1.410

1.411 - 1.435

• Stop bar removal allows for infinite stripping of insulation

• 12928 stop bar permits a stripping length up to 2-1/16"(61.9mm)

• WA1 adapter permits the use of the SW2 ratchet wrench

Bushing #

WS 6-1.475

WS 6-1.500

WS 6-1.525

WS 6-1.550

WS 6-1.575

WS 6-1.600

WS 6-1.625

WS 6-1.650

WS 6-1.675

WS 6-1.700

WS 6-1.725

WS 6-1.750

WS 6-1.775

WS 6-1.800

WS 6-1.825

WS 6-1.850

WS 6-1 875

WS 6-1.900

• WA3 adapter allows strip lengths up to 5 1/2"(139.7mm) and fits SW2 wrench for extra leverage

WA1 Adapter Part No. 12920



WA3 Adapter Part No. 12930



12911 rev5

05-11-17ff

WS 6 Drill Stop Bar Part No. 12953



Part No. 12954

WARRANTY: RIPLEY warrants its products against defective materials and workmanship for a period of one year from date of shipment from the RIPLEY factory provided the product is utilized in accordance with instructions and specified ratings.



46 Nooks Hill Road, Cromwell, CT 06416 USA ~ Phone: 800-528-8665 ~ Int'l: (01) 860-635-2200 Fax: (01) 860-635-3631 ~ E-mail: info@ripley-tools.com ~ Internet: www.ripley-tools.com